


Locomotive with remote control

Lok mit Fernsteuerung

Battery-powered functions:
Press the "Start" or "Back" button on the locomotive to activate and prepare it for the IR signal from the remote control. The locomotive can now be manoeuvred by using either the buttons on the locomotive itself, or those on the remote control. The locomotive will switch off automatically after five minutes of inactivity.

Note! The engine needs to be driving in the forward direction when driving up an ascending track.

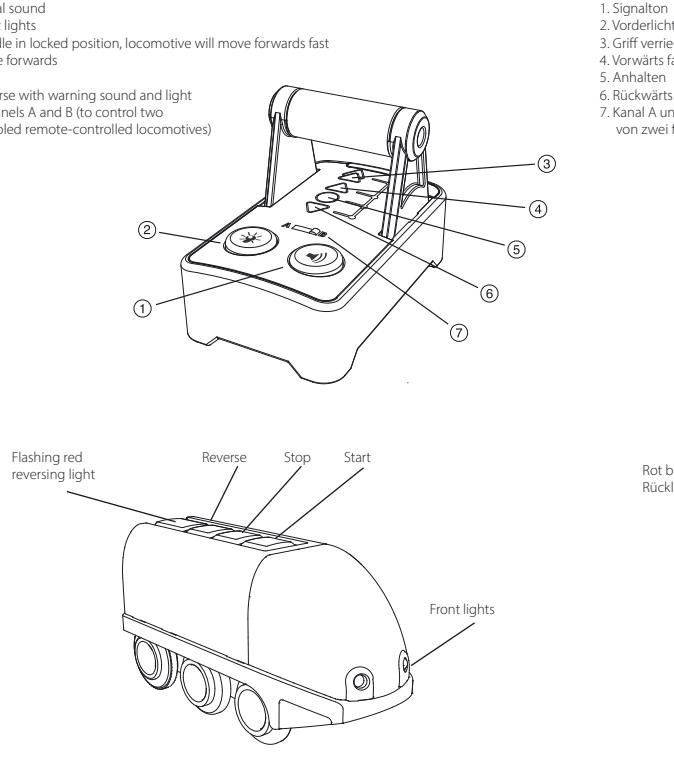

Keep in mind that:


- For the best play experience, always play with the engine on clean tracks.
- The toy is intended for indoor play only.
- The child's hair can easily get caught in moving parts.
- The toy is not water-resistant and shall not be washed in a dishwasher as well as come into direct contact with water. Wipe with a clean dry cloth to remove any foreign materials.
- The toy shall not be disassembled for safety reasons.
- The plastic in the toy can fade over time. Avoid strong sunlight and other heat sources.

Please visit our website at brio.net for more information on how to care for your prized Brio toy.


This infra-red controlled toy works best if you follow these instructions:

1. Infra-red light works best in normal or reduced lighting.
2. Avoid leaving the toy in the remote control in direct sunlight or flashing light. This can affect the infra-red light. If this happens, wait approx. 10 seconds before reactivating the toy.
3. Both the remote control and the locomotive have channel selectors (A or B). Check that the channel selector on both units has the same setting.

Installing batteries:

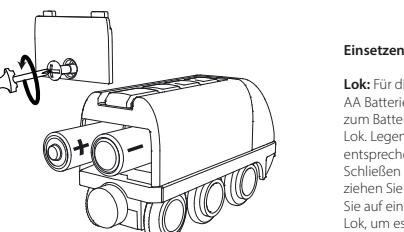

Remote control: Requires 2 x 1.5 V AA batteries. Slacken the screw on the battery cover on the back of the remote control. Install the batteries according to the illustration (+/-). Close battery cover, and tighten the screw. Push one of the buttons on top of the locomotive to activate it.

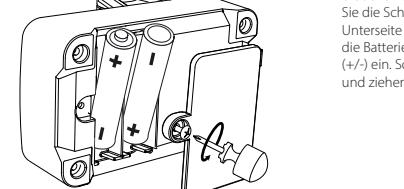

Important:
Diese Batterien sollten nur von Erwachsenen eingesetzt und ausgewechselt werden.
 - Unterschiedliche Batterietypen oder neue und bereits benutzte Batterien müssen nicht zusammengemischt werden.
 - Nur empfohlene Batterien desselben Typs oder einen gleichwertigen Typ wie empfohlen (1,5V) verwenden.
 - Batterien sind zu entfernen, falls die Polsterung im Batteriefach entspricht einlegen.
 - Verbrauchte Batterien aus dem Spielzeug entfernen.
 - Die Versorgungsklemmen dürfen nicht kurzgeschlossen werden.
 - Always remove batteries if the toy is not going to be used for some time.
 - Protect the toy from water or dampness.
 - Do not attempt to recharge non-rechargeable batteries.
 - Recyclable batteries must be disposed of in the bin before being charged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Used batteries and electrical components must be disposed of at an approved collection point.
 - Electrical components or batteries must not be thrown with household waste.

Please retain for future reference!

Bitte für spätere Nachschlagen aufbewahren.

Por favor, guarde este documento para consultas futuras.

Conservare per riferimento futuro.

Používejte tento dokument pro budoucí využití.

Prosim, odložte si na účely použití v budoucnosti!

Zachowaj do wykorzystania w przyszłości!

